


Quick Installation Guide MultiPlus-II


24V 3000VA 230Vac
 48V 3000VA 230Vac (hw rev 08 and above)
 48V 5000VA 230Vac (hw rev 03 and above)

www.victronenergy.com

Included

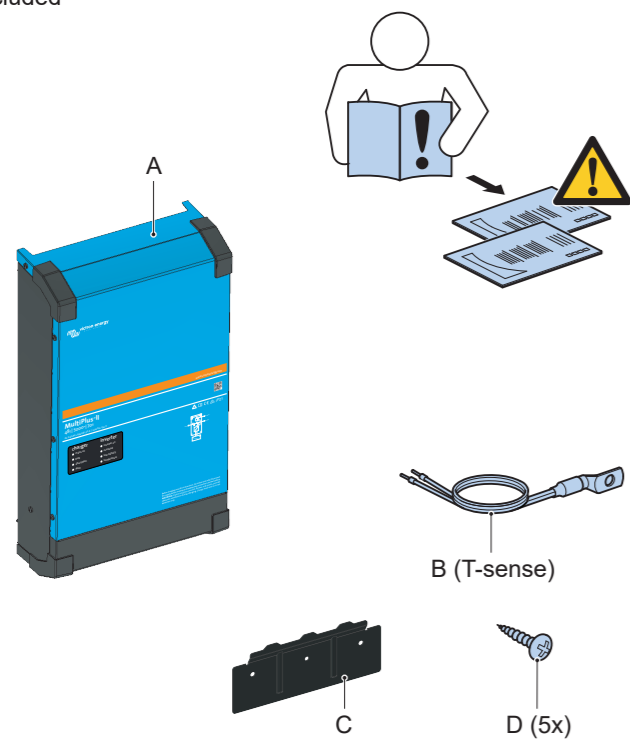

Not included

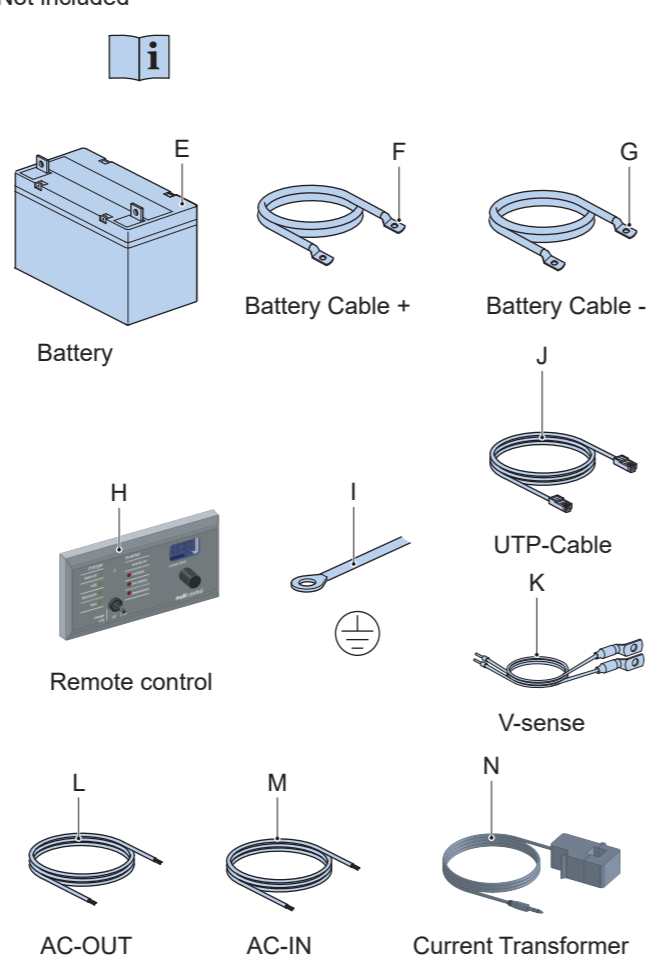

For fuse values:
refer to the user manual

Fuse (not included)

